



Hamilton Beach 49980A Bottom Plate Replacement

This guide will show how to remove the plate that covers the entire bottom of the device. This guide will serve as a prerequisite guide for most other guides on this device.

Written By: Daniel Servant



INTRODUCTION

Use this guide to replace the bottom case of the Hamilton Beach 49980A.

Step 1 — Bottom Plate



- Begin by inverting the coffee maker and resting it on a flat surface to make working on the bottom easier.
- Now use a Y0 bit to remove all of the .46 inch long screws from the bottom.
- Lift the plate to remove it from the rest of the machine.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 04:06:23 AM.